 




TBB3 Rechargeable Battery Pack Instructions

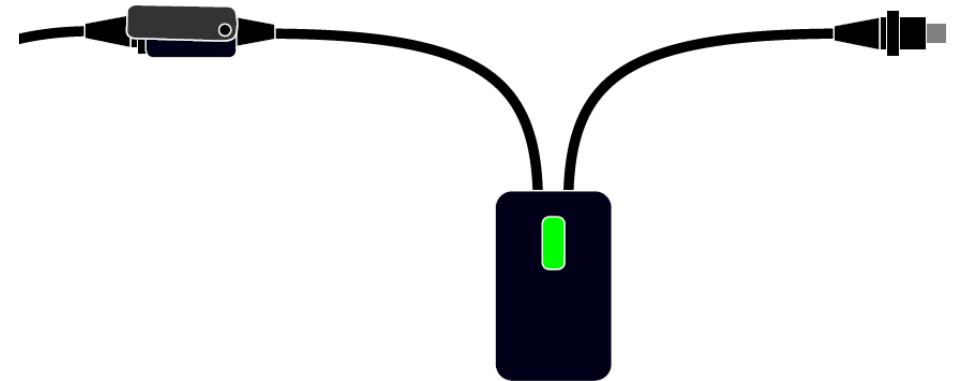

Celebrity Motion Furniture Ltd

Common Road, Huthwaite, Nottinghamshire, NG17 2JY

Tel: 01623 440626

Email: info@celebrity-furniture.co.uk

TBB3 Rechargeable Battery Pack

BEFORE FIRST USE

 
Always charge fully before first use.
This should take around 4 hours.

REMOTE CHARGING

The unit can be charged separately from the chair. To do so switch power off and disconnect connector from the chair.


Now re-plug in the alternative power supply and unit will re-charge.

The TBB3 rechargeable battery pack is compatible with all Celebrity powered models and one charge will allow between 50 and 100 cycles depending on the action and users weight.

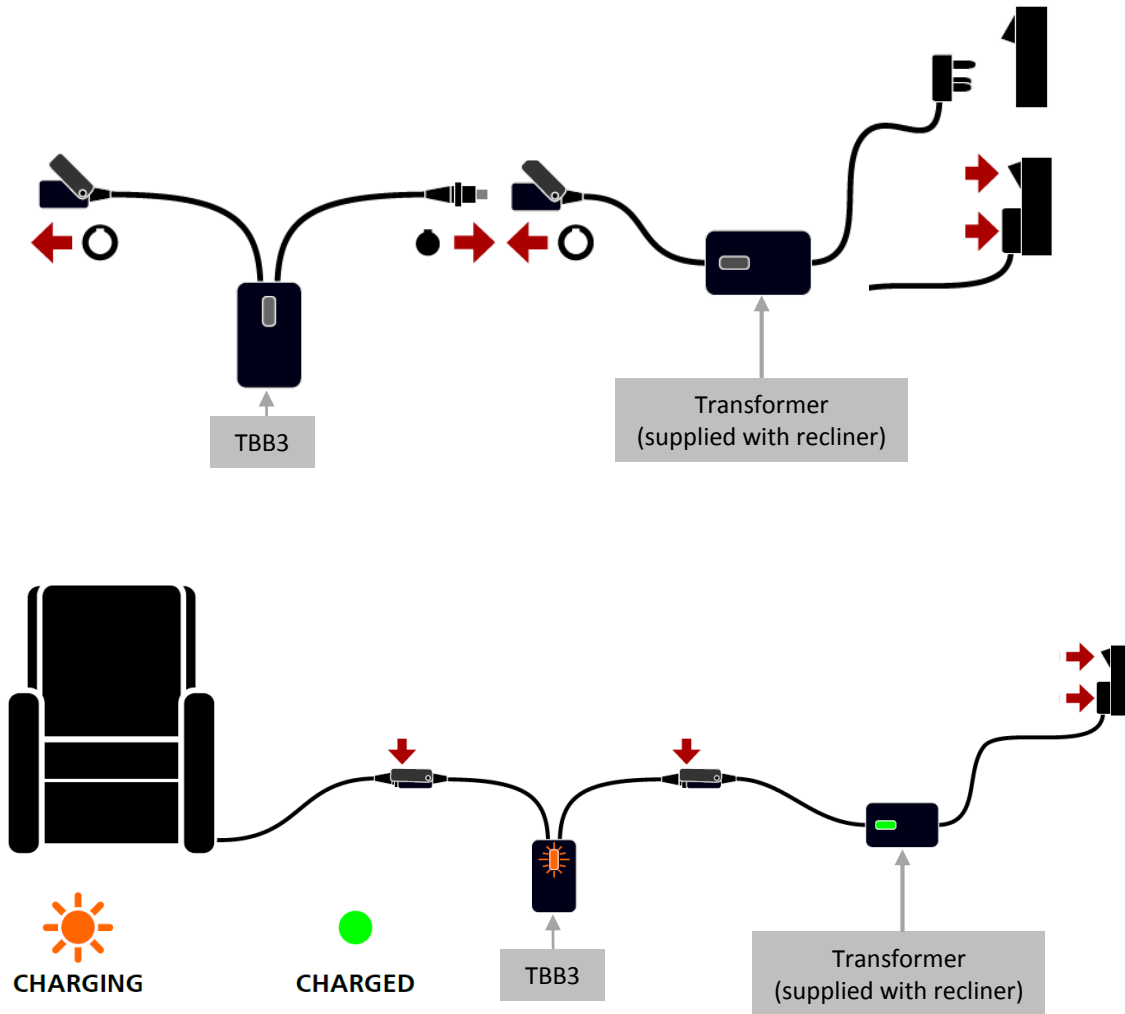

CONNECT TO THE CHAIR

 The TBB3 unit can be charged whilst attached to the chair. The transformer can be removed once the TBB3 is charged.

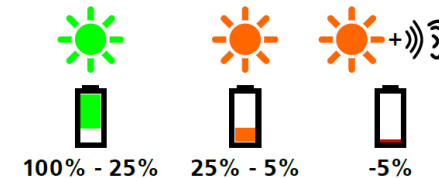

GREEN LIGHT: Battery is charged.
ORANGE LIGHT: Battery running low.
ORANGE LIGHT and BEEPING SOUND : Unit is nearly out of charge and needs re-charging.